

## **Mikrotik Netinstall**

1. Download latest version Netinstall apps.

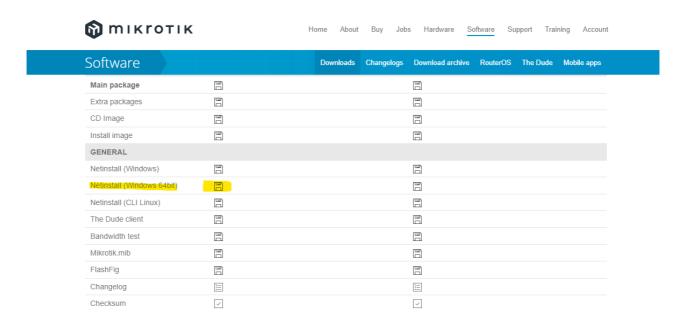


2. Download latest version package of the router.

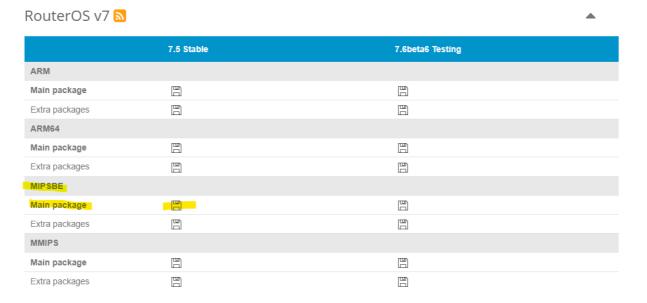


- 3. Make sure Netinstall and RouterOS are same version.
- 4. Press reset button, do not release the button and then turn on power, wait until you hear beep sound then release reset button. You may have to wait 30 to 50 second.


## 5. Put IP address in Laptop

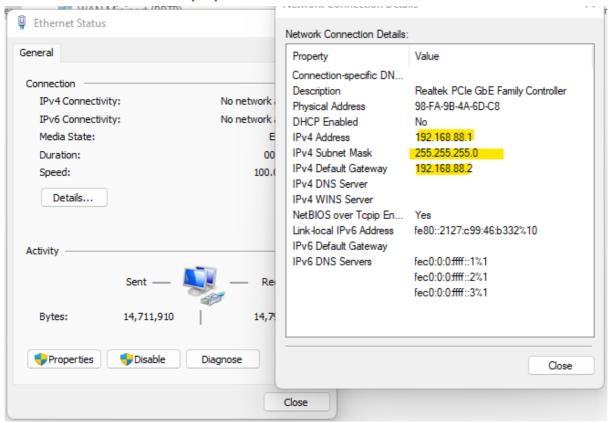

## 6. Put IP address in Netinstall apps> Net booting

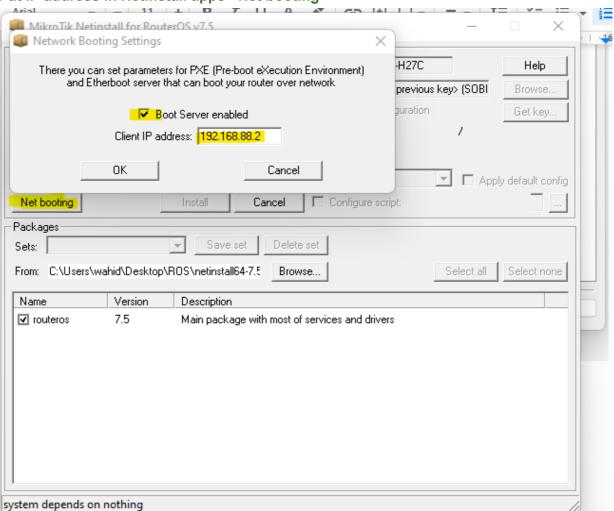

7. Select Router and package, then Install.

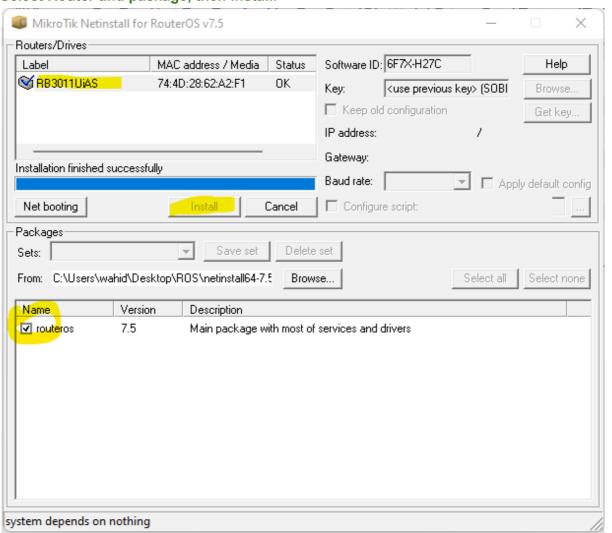

- 8. Reboot the router.
- 9. Done, if you can login to the router.